

INSIGNIA™

QUICK SETUP GUIDE

19" LED TV
NS-19E310NA15

Thank you
for purchasing this state-of-the-art Insignia television. We hope you enjoy the quality and reliability of this television for years to come.




FIND YOUR USER GUIDE ONLINE!
We are going green so a copy of your User Guide is not provided in the box but is available online.
Go to www.insigniaproducts.com, then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.



1 START HERE

How do I attach the stand to my TV? (not for wall mounting)


- A** Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- B** Find the front of the TV stand, then slide the slot in the stand over the tab in the stand column.
- C** Push the TV stand into the stand column until it snaps into place.

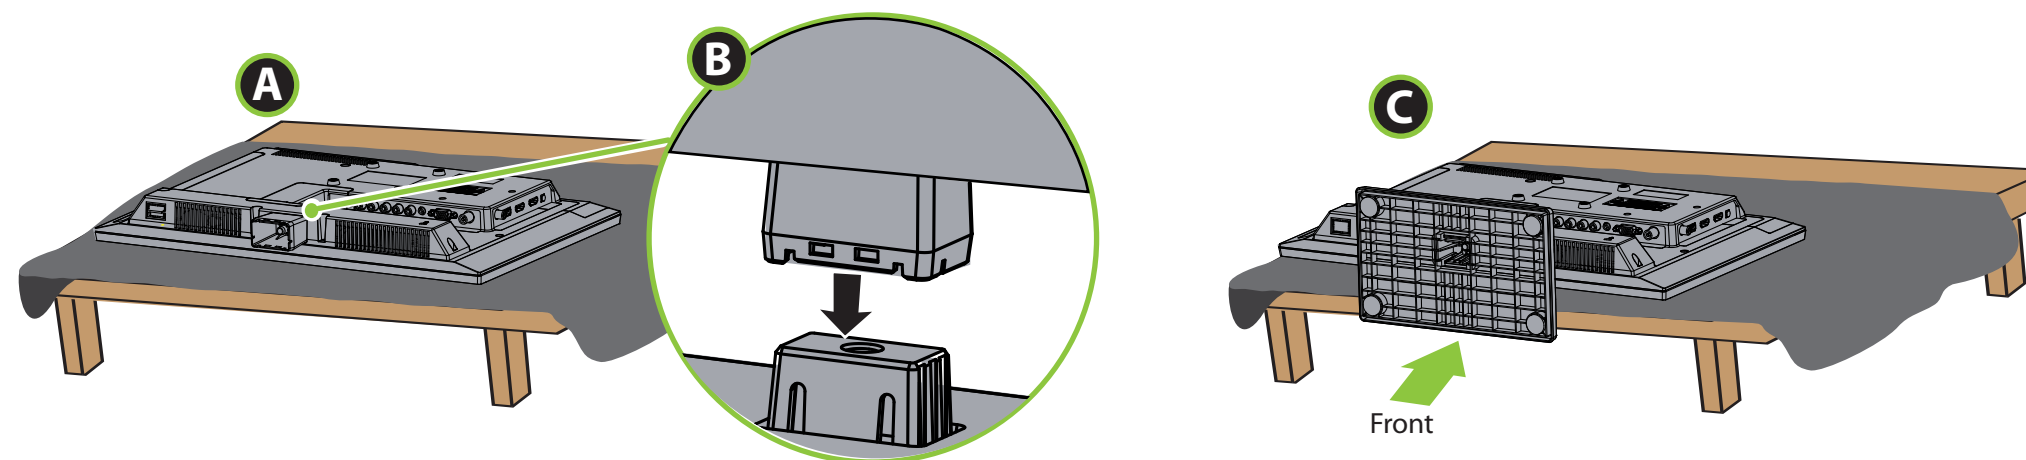

- OR -

How do I prepare my TV for wall mounting (not for use with a TV stand)

- A** Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- B** Remove the two screws that secure the stand column to the TV screen, then remove the stand column.
- C** See the instructions that came with your wall mount for more information about how to correctly mount your TV.

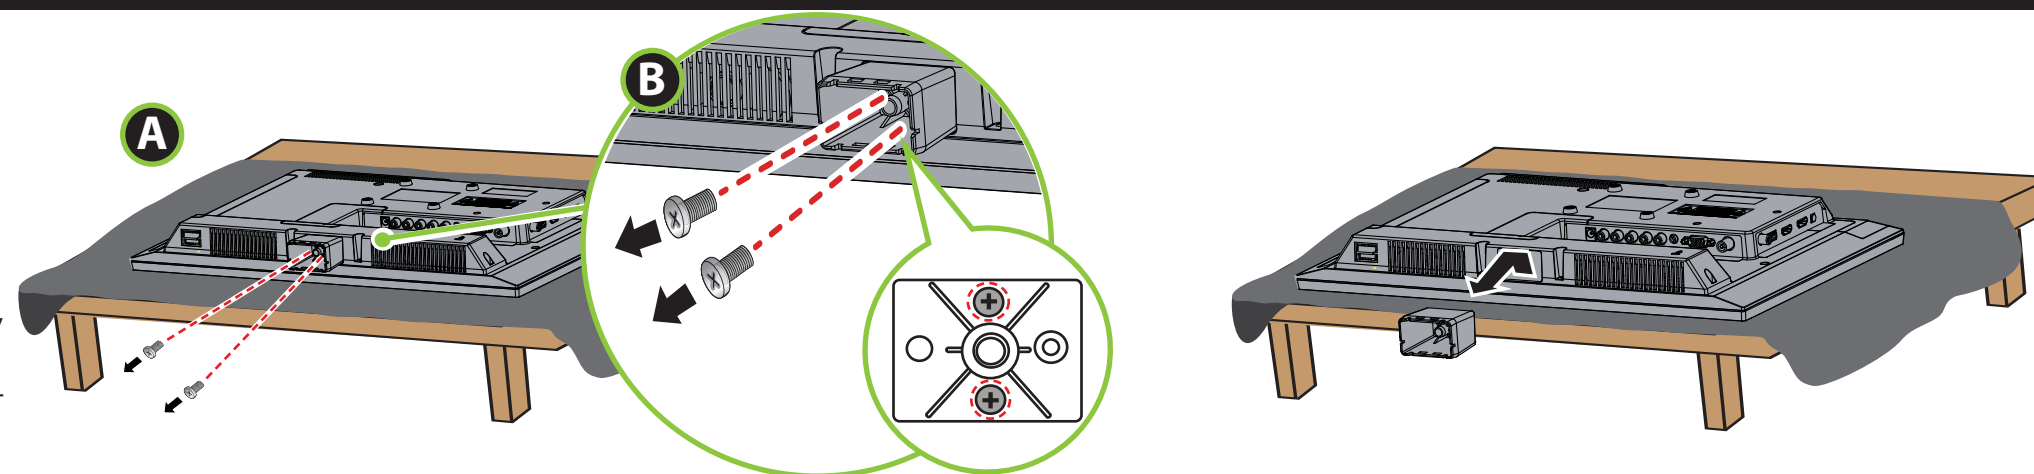

STOP!

Do not plug your power adapter in until all other devices have been connected.


Included accessories



Power adapter



Remote control and two AAA batteries

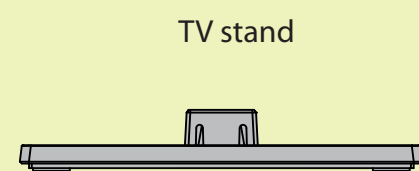

TV stand

Which cables do you have?

Your TV has several different jacks for connecting devices. For the best video quality, use the best available connection. Use the cables that came with your devices.

VIDEO QUALITY	JACK TYPE	CABLE CONNECTOR
BEST	HDMI video/audio	
BETTER	Component video and analog audio	
GOOD	Composite video and analog audio (AV)	
GOOD	Coaxial video/audio	

Note: You can also connect a DVI device to your TV. See your online User Guide for connection instructions.


Features

Front view



Remote control sensor
Power indicator

Back view

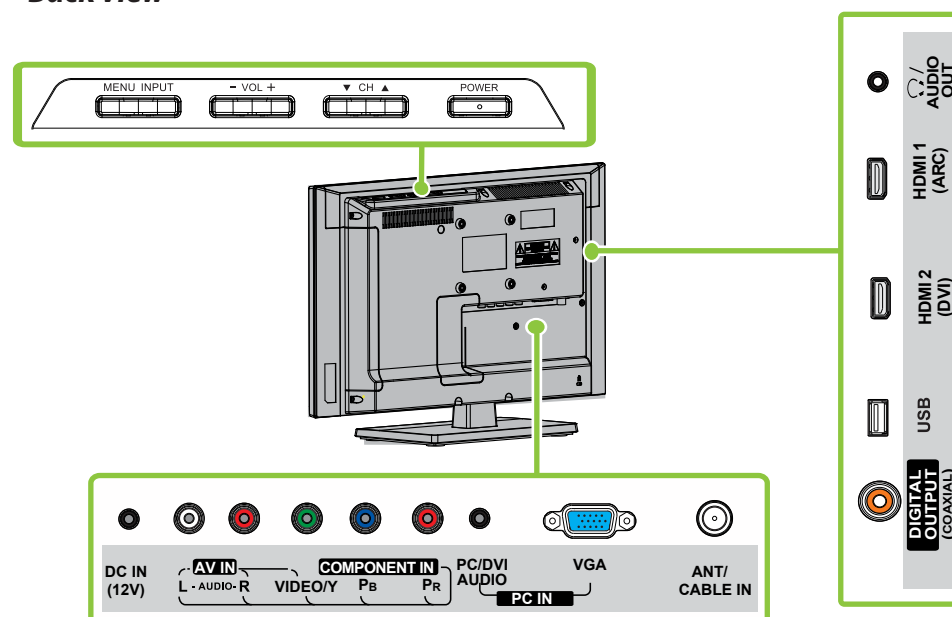


Note: Images do not necessarily represent the exact design of your television.

2 MAKING CONNECTIONS

How do I watch TV (cable or satellite receiver) or connect a device such as a DVD or Blu-ray disc player, game station, or camcorder?


Using an HDMI cable (BEST)

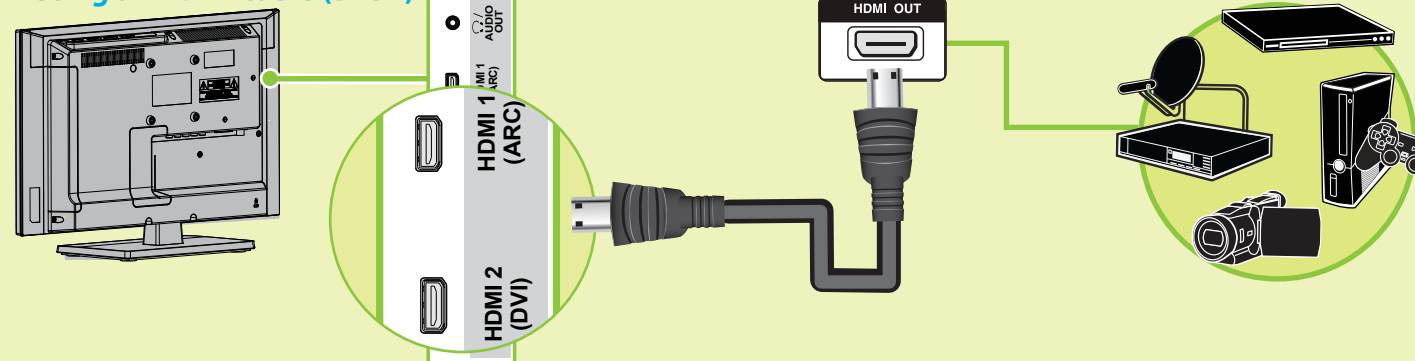

Multi-purpose jacks: You can plug any device that uses HDMI into either HDMI jack. However, certain devices must be connected to the ARC or DVI jacks. See the instructions that came with your ARC or DVI device.


Using component cables (BETTER)

- OR -
Using an AV cable (GOOD)

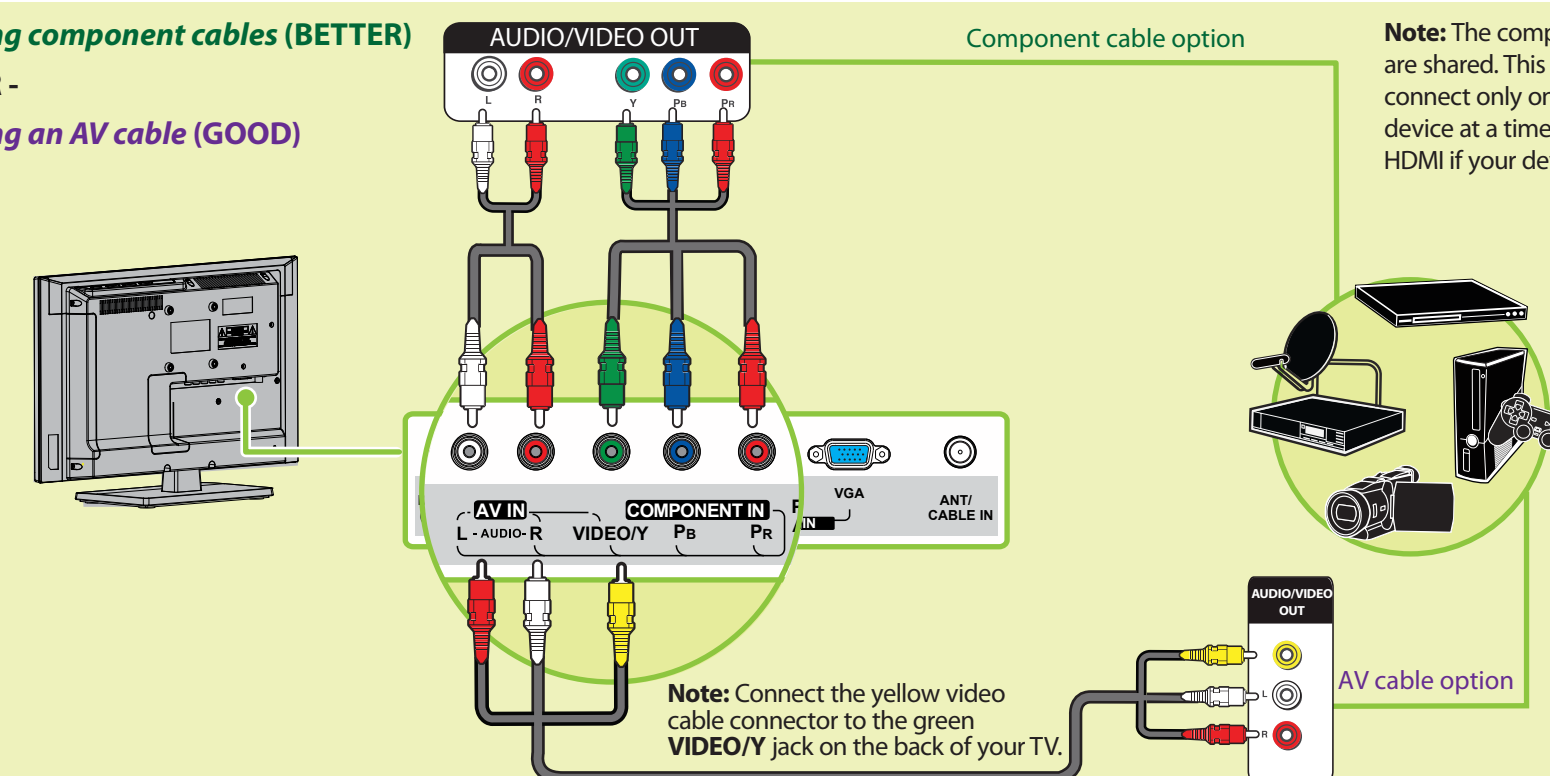

Note: The component and AV jacks are shared. This means you can connect only one component or AV device at a time. We suggest using HDMI if your device supports it.

How do I connect my TV to an antenna or cable wall jack?

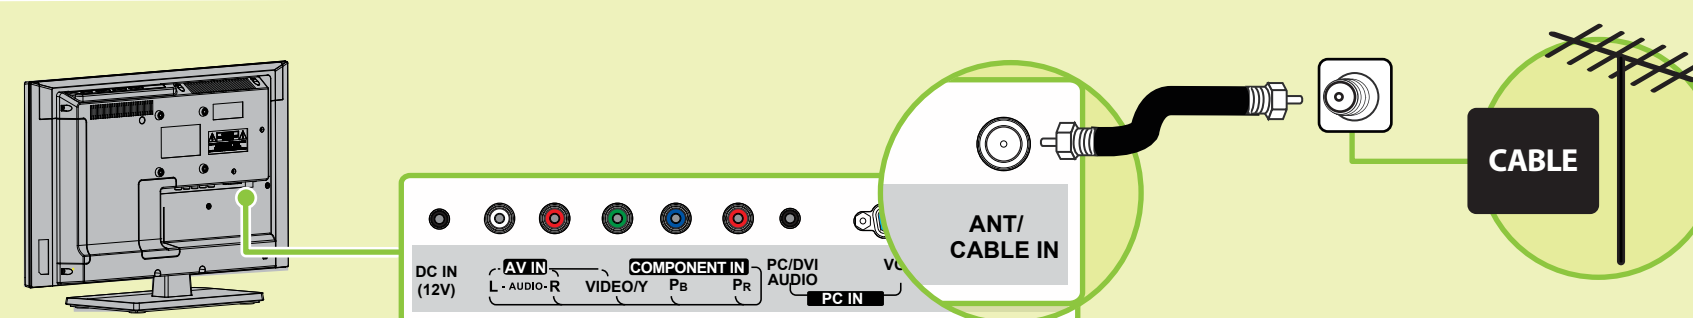


OVER

3 CONNECTING AUDIO DEVICES


How do I connect my TV to external speakers?

Using digital audio

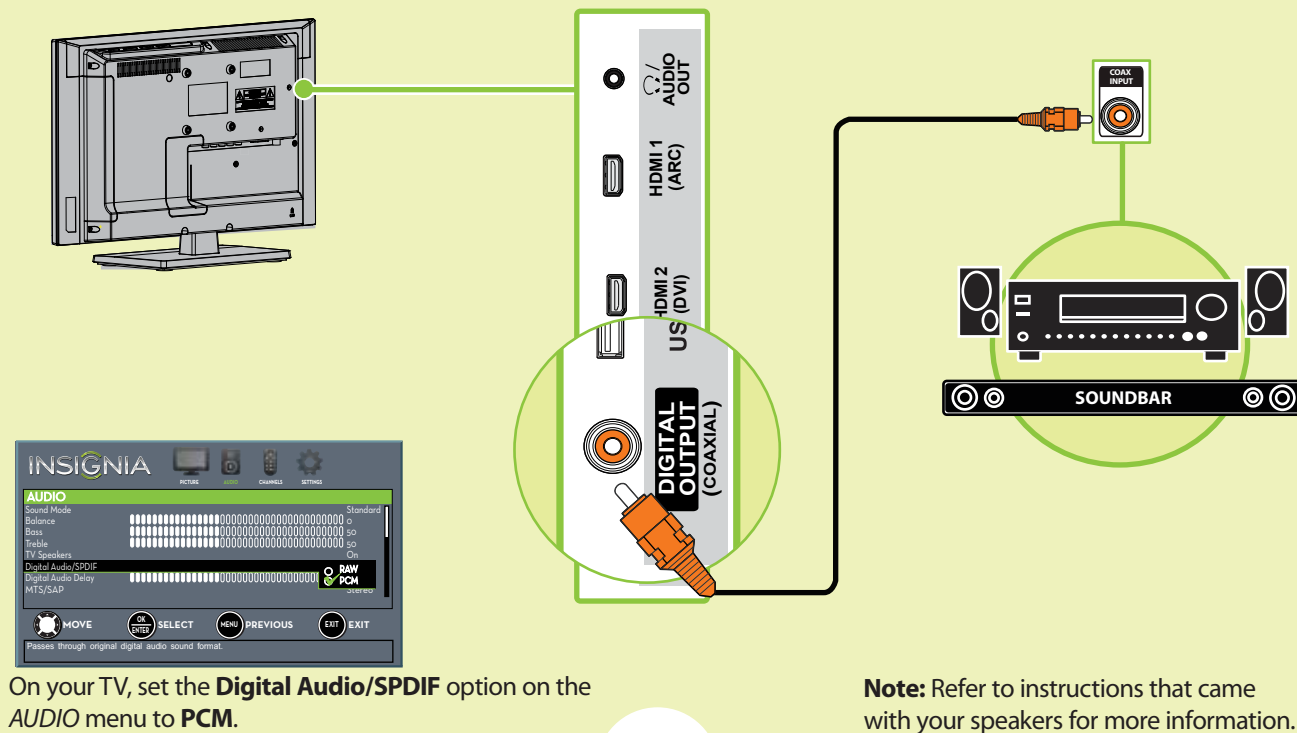


- OR -

Using analog audio

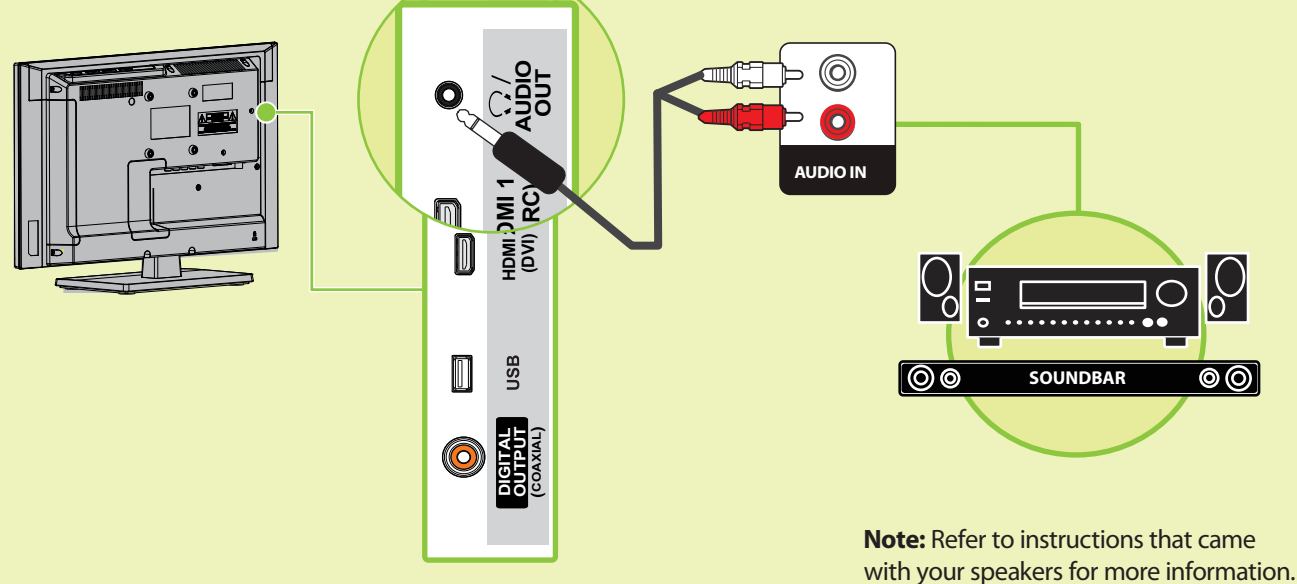


Using your remote control

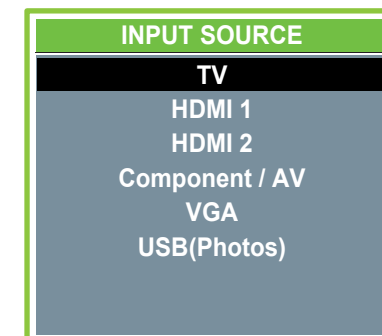

What are my screen-size options?

- NORMAL:** Original aspect ratio is preserved. Black bars are present if content is not widescreen (16:9).
- ZOOM:** Expands the image to fill the screen. The top and bottom of the image may be cropped.
- WIDE:** Displays content recorded in a 16:9 (wide-screen) aspect ratio.
- CINEMA:** Stretches the image at the edges, but keeps a clear image in the center.
- AUTO:** Automatically adjusts the image based on the screen size and the TV program. Select this option if you are uncertain which aspect ratio to choose. **Note:** Auto is only available when **Auto Aspect Ratio** in the **CHANNELS** menu is set to **On**.

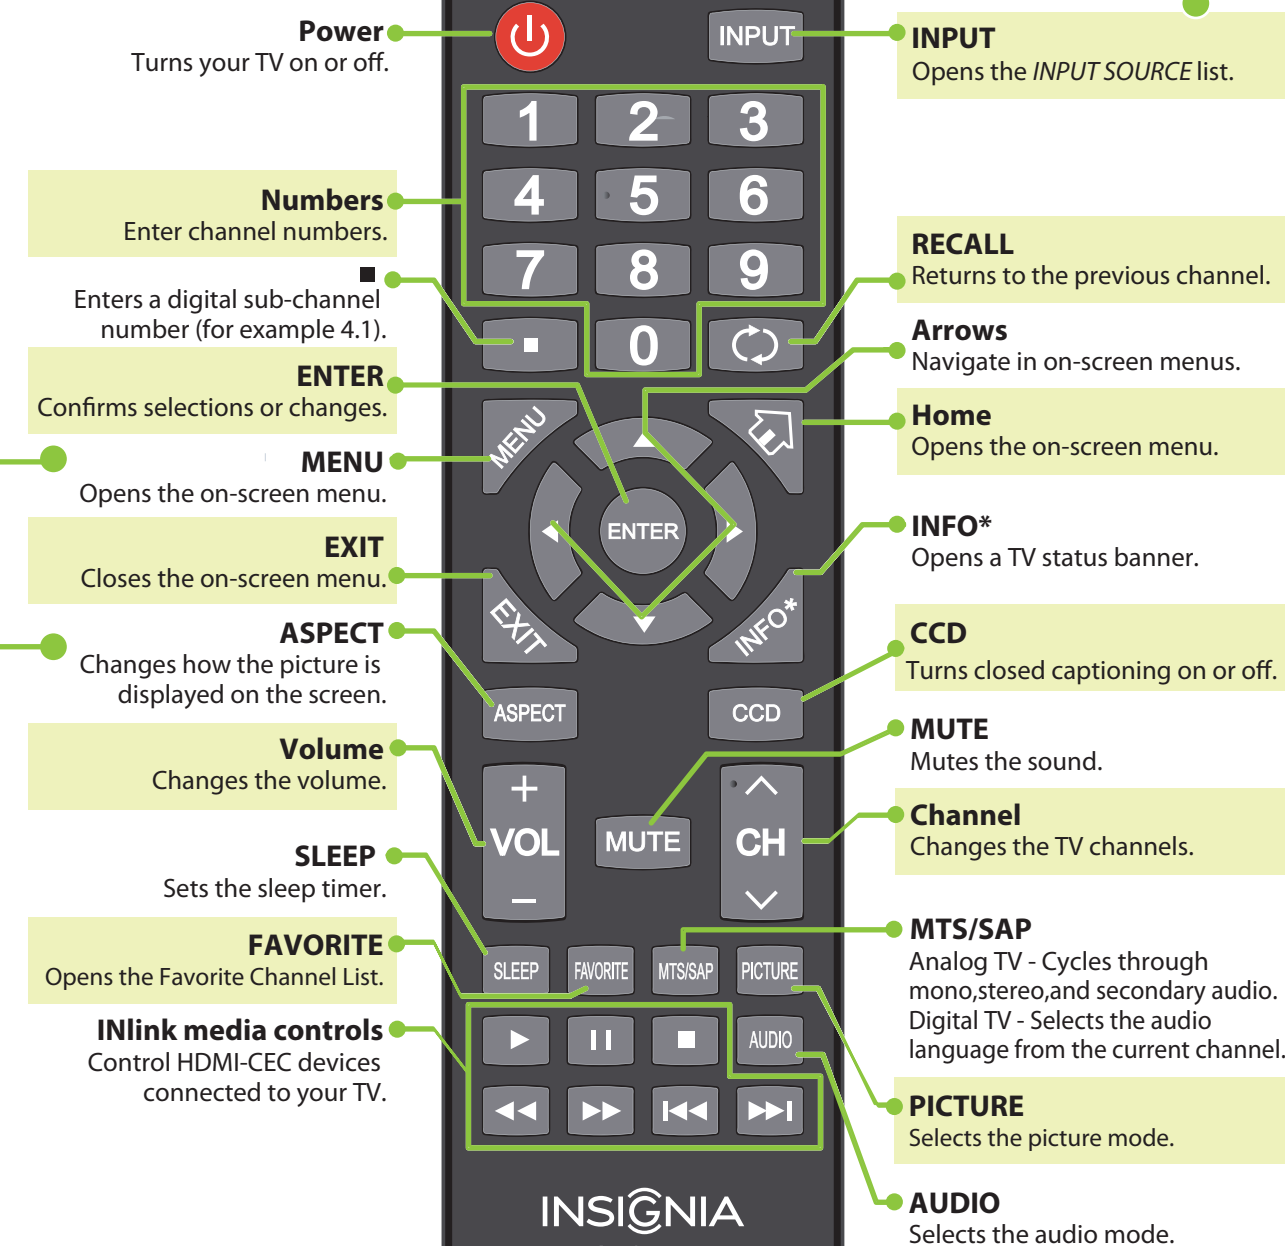


4 TURNING ON MY TV

When can I turn on my TV?

The best time to turn on your TV is after you have attached the TV stand or wall-mounted your TV and connected all devices.

When your television is in place:

- 1 Plug the power adapter into the **DC IN** jack on the back of your TV.
- 2 Plug the other end of the power adapter into a power outlet.
- 3 Remove the remote control cover and install the batteries, matching the + and - symbols.
- 4 Press (power) on your remote control.
- 5 Follow the on-screen instructions.

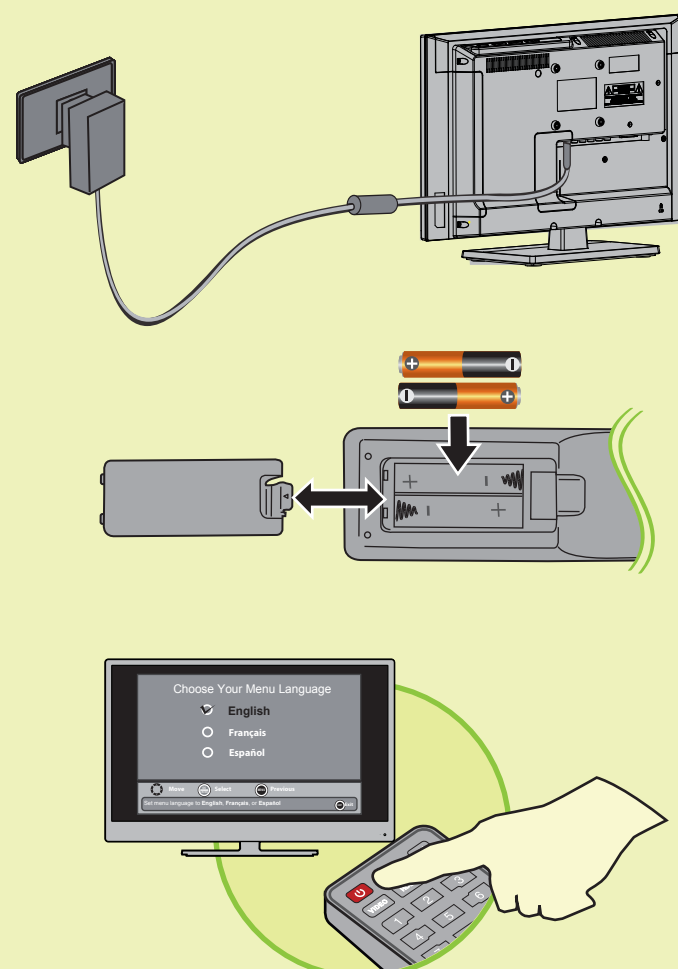

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table for common codes.

UNIVERSAL REMOTE TV CODES	
CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX	
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
Cox	1326, 1463
Direct TV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
Dish Network	720
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Tivo	0091
Verizon	0198, 0490
UNIVERSAL REMOTE CONTROLS	
One for All	0054
Philips	0198, 0490
RCA	135
Sony	068, 069, 078, 096, 100, 164, 168, 229, 026



For an up-to-date list of codes for other cable providers and universal remote brands, scan this **QR code** or visit www.insigniaproducts.com/remotecodes

INSIGNIA

One-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

See your online *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.

Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 BBY Solutions, Inc. All Rights Reserved. 1-877-467-4289 www.insigniaproducts.com